



1 & 2 = Phase In & Out  
3 & 4 = Neutral  
5 & 6 = RS485 Communications Contact  
5 = TX/RX (-)  
6 = TX/RX (+)

7 = G485 (⊥)  
11 & 12 = Test Pulse Output (12 - | 11 + )